



User Manual

DNAKE S617

REMARK

Please follow the user manual for correct installation and testing. If there is any doubt please call our tech-supporting and customer center.

Our company applies ourselves to reformation and innovation of our products. No extra notice for any change. The illustration shown here is only for reference. If there is any difference, please take the actual product as the standard.

The product and batteries must be handled separately from household waste. When the product reaches the end of service life and needs to be discarded, please contact the local administrative department and put it in the designated collection points in order to avoid the damage to the environment and human health caused by any disposal. We encourage recycling and reusing the material resources.

CATALOG

PRODUCT FEATURE	1
TECHNICAL PARAMETER	1
PACKAGE CONTENT	2
OVERVIEW	3
BASIC OPERATION	4
DEVICE SETTING	5
WEB SETTING	10
SYSTEM DIAGRAM	25
DEVICE WIRING	26
INSTALLATION	29
TROUBLESHOOTING	34
SAFETY INSTRUCTION	35

PRODUCT FEATURE

1. 8-inch IPS LCD capacitive touch screen
2. 3 output relays for door locks
3. 120° wide-angle 2MP HD camera with automatic lighting
4. Support WDR technology to lighten the dark areas and darken the overexposed parts of the image
5. Unlock methods: Face recognition, IC/ID card, PIN code, Bluetooth
6. Tamper alarm

TECHNICAL PARAMETER

Power Supply: PoE+ (802.3at) or DC 12V/3A

Standby Power: 8 W

Rated Power: 16 W

Resolution: 1280 x 800


Working Temperature: -40°C to +55°C

Storage Temperature: -40°C to +70°C


Working Humidity: 10% to 90% (non-condensing)

PACKAGE CONTENT

MODEL: S617 (Surface Mounting)



S617



Screw



Screw Fixing Seat



Wrench Screw




Interface Plate



Cable Locking Plate



Hang Rope



Rear Cover



Sealing Plug




Rain Hood (Optional)




Quick Start Guide

MODEL: S617 (Flush Mounting)



S617



Screw



Screw Fixing Seat



Wrench Screw




Interface Plate



Cable Locking Plate




Hang Rope



Rear Cover




Sealing Plug



Rain Hood (Optional)



OVERVIEW

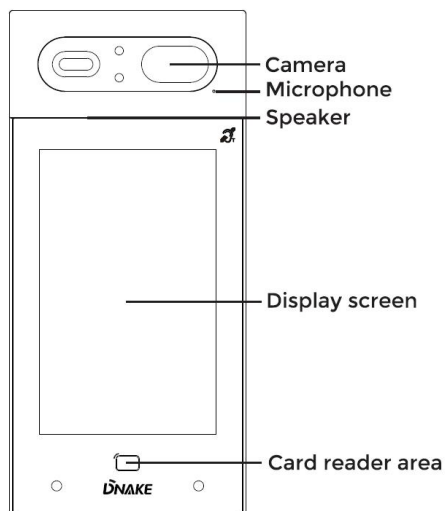

BASIC OPERATION

1. Call and Monitor

1.1. Call Indoor Monitor

Go to the "CALL" page, press room numbers on Door Station to call Indoor Monitor. During the call, press the hang up icon on Door Station to end the call. If the call fails or Indoor Monitor is busy, Door Station will make a beep sound.

1.2. Monitor Door Station

Click Monitor icon on Indoor Monitor's homepage to monitor Door Station.

2. Contacts

Go to "CONTACTS" to enter contacts list. You can dial any residents in this list.

3. Unlock

Go to PIN page, press PIN Code and lock icon to unlock.

4. Concierge


Go the homepage, press concierge button to call Master Station.

5. Facial Recognition

Go to the "FACE" page to wake up face scan. Facial recognition should be enabled beforehand.

DEVICE SETTING



Connect Door Station and PC to a network switch in the same LAN. You can enter the admin settings of Door Station by pressing PIN and entering default password (123456#). This is where you can configure the device.

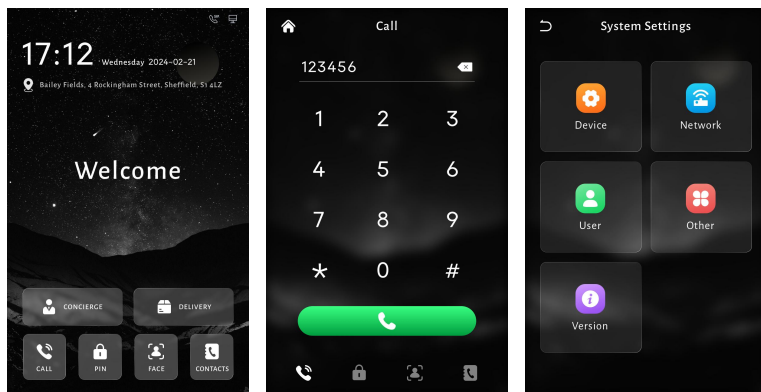

1. Device Settings

Numbers here are basic settings for making a call to Indoor Monitor. For Door Station, the building and unit number should be the same as those in Indoor Monitor. For Villa Station with one button, the building, unit, and room number should be the same as those in Indoor Monitor.


The Device No. here is to distinguish different Door Stations when more than one Door Station in one building.

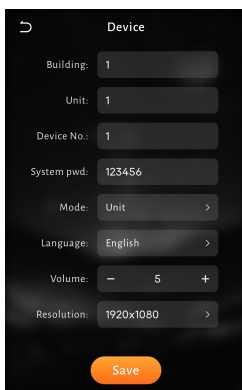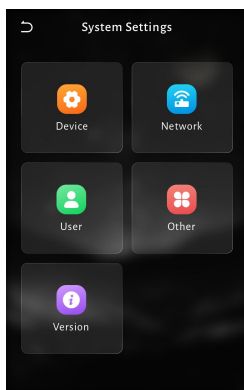

Building:	Number of the building (Building range: 1-999);
Unit:	Number of the unit (Unit range: 1-99);
Device No.:	Number of the Index (Unit range: 1-9);
System pwd:	Administrator password of the Device (Default 123456);
Mode:	Mode for apt., wall or villa (Unit and Gate)
Language:	16 languages supported (简体中文, English, 繁體中文, עברית, Deutsch, Español, Türk, Tiếng Việt, Nederlands, Português, Polski, Русский, عربي, Français, Italiano, slovenský);
Volume:	Volume of System can be set from 1 to 6;
Resolution:	4 resolutions supported (320 × 240, 640 × 480, 1280 × 720, 1920 x 1080);

2. Network Settings


The device network can be set to either DHCP or a static IP address. CMS parameters should be configured here when you try to register this device to CMS.

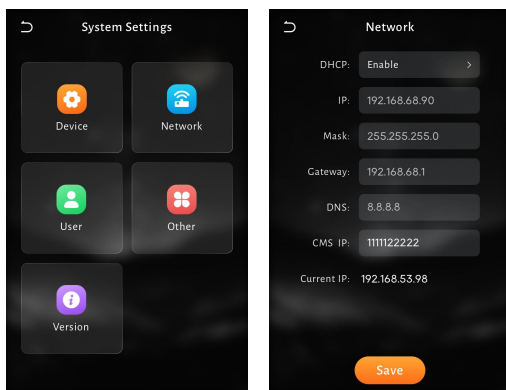

DHCP:	Enable DHCP (Dynamic Host Configuration Protocol) to dynamically distributing network configuration parameters;
IP:	Configure Static IP address to manually distributing network configuration parameters;
Mask:	Subnet mask;
Gateway:	A component that is part of two networks, which use different protocols;
DNS:	Domain Name Server of the device;
CMS IP:	Server address of CMS;
Current IP:	Current IP address of the device.

3. User


You can manage users on the User page.

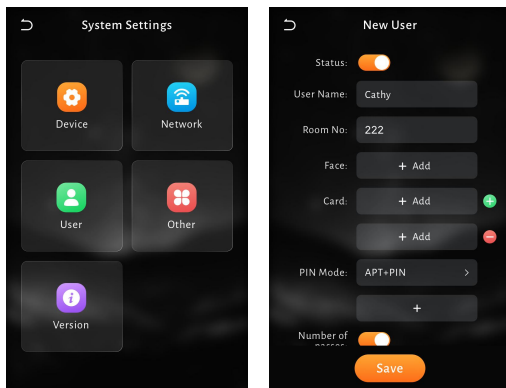

New User:	You can create Users and relate it with face, card, PIN code here;
All Users:	All users will be shown here and you can edit or delete that;
Public PIN Codes,:	PIN code for the public;
Settings:	You can set Relay, Unlock Time, Unlock Delay, Face recognition and Elev Refe.

4. Other


You can reboot and reset device in Other page.

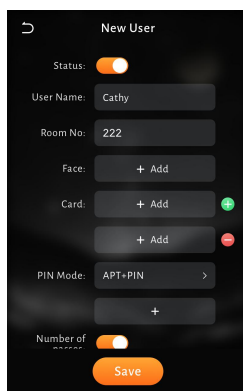

Reboot:	Reboot the device;
Reset:	Reset to factory settings;

5. Version

You can find basic information displayed in Version page.

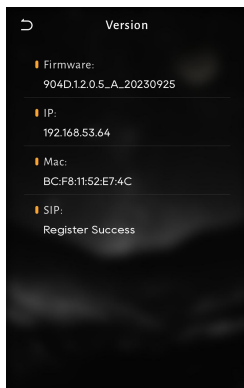


Firmware Version:	Firmware version of the device;
IP:	Current IP address of the device;
MAC:	MAC address of the device;
SIP:	Status of SIP registration of the device;

WEB SETTING

Connect Door Station and PC to a network switch in the same LAN. You can enter the IP address of Door Station in the web browser search bar and log in with the default account (admin) and password (123456). This is where you can configure the device.

For getting the IP address, you can search by DNAKE Remote Upgrade Tool which is installed in the same LAN with the devices.

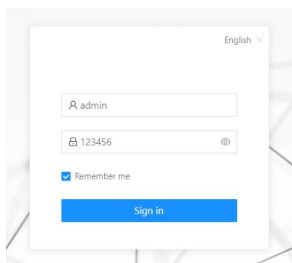

1. General

1.1. General > Information

When you first log in to the web interface, you can find basic information displayed in this dashboard.

DNAKE

General

Information

Basic

Time

Password

System

Intercom

Device

Network

SIP

Ring Group

Phonebook

Call Logs

Access

Access Control

Person

Unlock Logs

Advanced

Video

More

English

Help

Admin

Product

Model	Firmware Version	MAC Address
S617	904D.1.2.0.7_A_20231106	BC:F8:11:0E:A6:6C
Framework	UI	MCU
1.9.0.20230626	2.0.7.20231106	2.0.0

Network

DHCP	IP Address	Mask
Enabled	192.168.68.101	255.255.255.0
Gateway	DNS	
192.168.68.1	192.168.98.198	


SIP Account

Account	Status
1699	Register Success
CMS IP	Status
192.168.53.201	Disabled

Model:	Model of the device;
Firmware Version:	Firmware version of the device;
MAC Address:	MAC address of the device;
Framework:	Framework of the device;
UI:	UI of the device;
MCU:	MCU of the device;
DHCP:	Status of DHCP;
IP Address:	Current IP address of the device;
Mask:	Subnet mask of the device;
Gateway:	Gateway of the device;
DNS:	Domain Name Server of the device;
Account:	SIP account of the device;
Status:	Status of SIP registration of the device;
CMS IP:	IP address of CMS;
Status:	Status of CMS registration;

1.2. General > Basic

Language, resolution and volume of the device can be configured in this column.

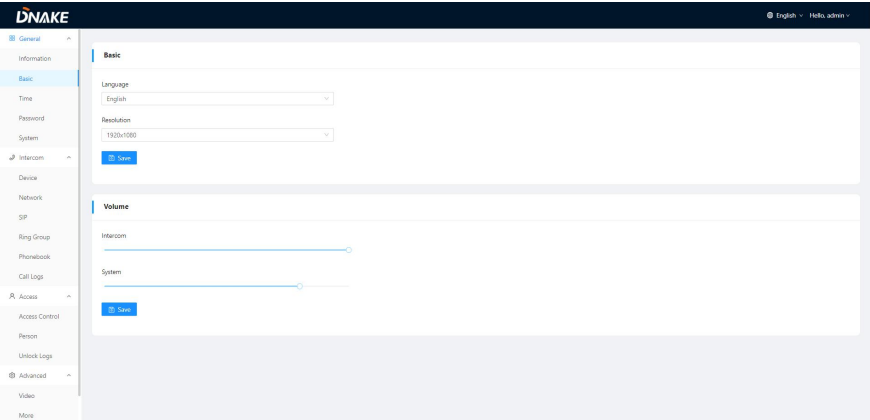

Language:	16 languages supported (简体中文, English, 繁體中文, עברית, Deutsch, Español, Türk, Tiếng Việt, Nederlands, Português, Polski, Русский, عربي, Français, Italiano, slovenský);
Resolution:	4 resolutions supported (320 × 240, 640 × 480, 1280 × 720, 1920 × 1080);
Intercom:	Volume of Intercom can be set from 1 to 6;
System:	Volume of System can be set from 1 to 6;

1.3. General > Time

Time of the device can be configured. Daylight Saving Time is also supported.

Auto (Time):	Enable to synchronize computer time;
Date&Time:	Date and time can be set manually;
NTP URL:	Network Time Protocol (NTP) is a protocol used to synchronize computer time;
Time Zone:	A region that observes a uniform standard time;
12H/24H:	Select 12H or 24H format to display on the device;
Time Format:	3 time formats supported (YYYY-MM-DD, DD-MM-YYYY, MM-DD-YYYY);
Daylight-saving Time:	Enable to set DST;
Start Time:	The beginning of DST;
End Time:	The ending of DST;
Offset Time:	The default value is 60 minutes;

1.4. General > Password

The System password is for the administrator to log in settings on the device while the Web password is for the administrator to log in settings on the web. The default password for both of them is 123456.

DNAKE

English

Help

admin

General

Information

Basic

Time

Password

System

Intercom

Device

Network

SIP

Ring Group

Phonebook

Call Logs

Access

Access Control

Person

Unlock Logs

Advanced

Video

More

System

Web

* Old Password

* New Password



* Confirm Password

Save

System Old Password:	Current administrator password of the Device (Default 123456);
System New Password:	New administrator password of the Device;
System Confirm Password:	Confirm administrator password of the Device;
Web Old Password:	Current administrator password of the web (Default 123456);
Web New Password:	New administrator password of the web;
Web Confirm Password:	Confirm administrator password of the web;

1.5. General > System

The system column is designed for data backup and restore, firmware upgrade, factory default, device reboot, packet capture, logs capture, and obtaining UI screenshots.

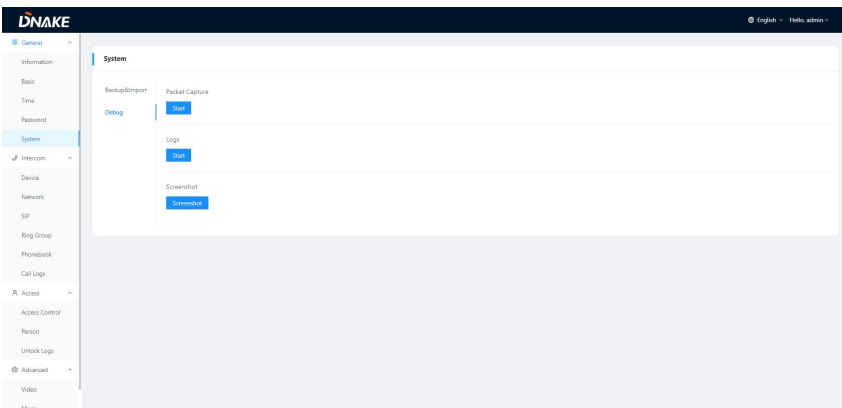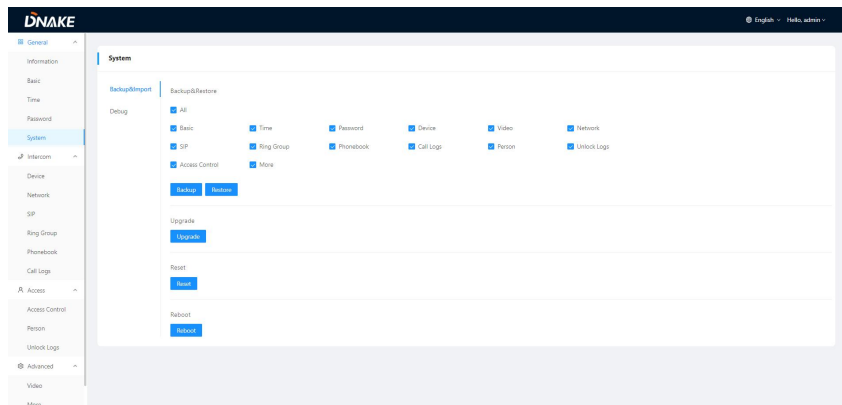

Backup&Restore:	Backup settings and restore settings;
Upgrade:	Upgrade equipment;
Reset:	Reset to factory settings;
Reboot:	Reboot the device;
Packet Capture:	Capturing packets can help developers reproduce positioning problems;
Logs:	Device logs;
Screenshot:	Screenshot device interface;

2. Intercom

2.1. Intercom > Device

Numbers here are basic settings for making a call to Indoor Monitor. For Door Station, the building and unit number should be the same as those in Indoor Monitor. For Villa Station with one button, the building, unit, and room number should be the same as those in Indoor Monitor.

The Device No. here is to distinguish different Door Stations when more than one Door Station is in one building.

The screenshot shows the 'Device' configuration page in the D-NAKE web interface. The left sidebar has a menu with the following items: General (Information, Basic, Time, Password, System), Intercom (selected), Network, SIP, Ring Group, Phonebook, Call Logs, Access (Access Control, Person, Unlock Logs), Advanced (Video, More), and a top bar with 'English' and 'Help, about'.

The 'Device' configuration page contains the following fields:

- Mode: A dropdown menu with 'Unit' selected.
- * Building: A text input field with '1' entered.
- * Unit: A text input field with '1' entered.
- * Device No.: A text input field with '1' entered.
- A blue 'Save' button at the bottom left of the form.

Mode:	Mode for apt. and wall (Unit and Gate Station);
Building:	Number of the building (Range: 1-999);
Unit:	Number of the unit (Range: 0-99);
Device No.:	Number of the device (Range: 1-9);

2.2. Intercom > Network

The device network can be set to either DHCP or a static IP address. CMS parameters should be configured here when you try to register this device to CMS.

DHCP:	Enable DHCP (Dynamic Host Configuration Protocol) to dynamically distribute network configuration parameters;
IP Address:	Configure Static IP address to manually distribute network configuration parameters;
Mask:	Subnet mask;
Gateway:	A component that is part of two networks, which use different protocols;
DNS:	Domain Name Server of the device;
CMS:	Enable to use CMS software to manage devices;
CMS IP:	Server address of CMS;

The SIP column concerns SIP registration, Display Name, Register Name, Username, Password, SIP Server Host, Outbound Proxy, Transfer Protocol, Video Payload, etc.

SIP

☒ SIP

Display Name: 5617

Register Name: 1099

Username: 1099

Password: *****

SIP Server Host: 192.168.1.100 * Port: 7788

Outbound Proxy: * Port: 5060

Transport Protocol: TCP


* Video Payload: 102

[Save](#)

SIP:	Enable to use SIP;
Display Name:	Display name of SIP;
Register Name:	Register Name of SIP;
Username:	Username of SIP;
Password:	Password of SIP;
SIP Server Host:	Directly fill in SIP server's address e.g., 192.168.68.90; The default port is 5060;
Outbound Proxy:	Outbound Proxy of SIP; the default port is 5060;
Transport Protocol:	Transport Protocol (UDP, TCP, TLS);
Video Payload:	Video payload range is 96-127;

2.4. Intercom > Ring Group

Ring group is for setting up SIP calls or call mode. Concierge button, the length of the call and ring time can also be configured here. It can support 1,000 items at most.

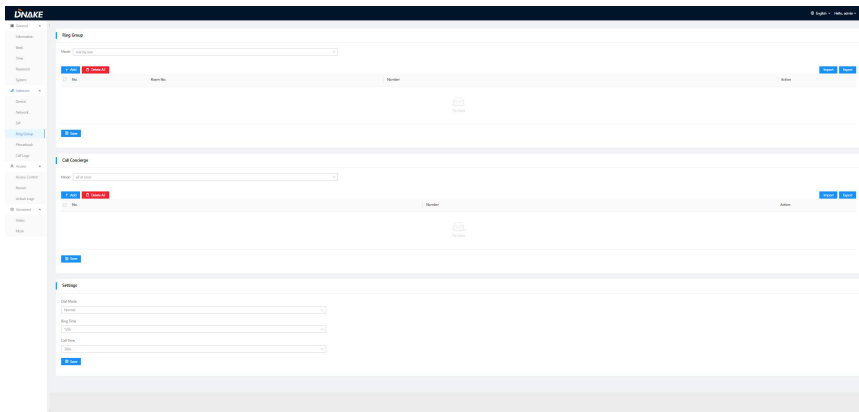

Mode:	2 modes supported (one by one, all at once);
Call Concierge URL:	Fill in the call destination for concierge button or the single button on the device; ● IP call: Fill in sip:IP address, e.g., sip:192.168.68.90; ● SIP call: Fill in sip:sip account@SIP server address:port, e.g., sip:101@192.168.68.90:5060; It can support 50 items at most;
Dial Mode:	2 dial modes supported (Normal, Repeat);
Ring Time:	The ring will be ended automatically after a period of time (10s, 20s, 35s, 45s, 60s, 90s, 120s)
Call Time:	The call will be ended automatically after a period of time (120s, 300s, 600s, 1200s, 1800s);

2.5. Intercom > Phonebook

All contacts on Door Station can be edited here. It can support 400 items at most.

General

Information

Basic

Time

Password

System

Intercom

Device

Network

SP

Ring Group

Phonebook

Call Logs

Access

Access Control

Person

Unlock Logs

Advanced

Video

More

Phonebook

Name

Number

Search

Reset

Add

Delete All

Import

Export

No.	Name	Number	Action
1	test1	1111111111	
2	test2	1235	
3	test3	1236	
4	test4	1237	
5	test5	1238	
6	test6	1239	
7	test7	1340	
8	test8	1341	
9	test9	1342	
10	test10	1343	

Search:	Fill in text inputs to search;
Reset:	Click reset to clear words in text inputs;
Delete All:	Delete all data on the chart;
Import:	Import all data to the chart;
Export:	Export all data on the chart;

2.6. Intercom > Call Logs

It can support 500 call logs at most; If the logs are more than 500, the previous logs will be covered;

General

Information

Basic

Time

Password

System

Intercom

Device

Network

SP

Ring Group

Phonebook

Call Logs

Access

Access Control

Person

Unlock Logs

Advanced

Video

More

Call Logs

Type

Date&Time

Start date

End date

Search

Reset

Delete All

Export

No.	Type	Name	Number	Duration	Date&Time
1	Outgoing	999-99-0160	999900160	2s	2023-11-20 19:55:30
2	Outgoing	999-99-0160	999900160	2s	2023-11-20 19:55:30
3	Incoming	999900160	999900160	3s	2023-11-20 19:52:32
4	Outgoing	999-99-0160	999900160	3s	2023-11-20 19:41:42
5	Outgoing	999-99-0160	999900160	1s	2023-11-20 17:45:08
6	Outgoing	999-99-0160	999900160	1s	2023-11-20 17:45:08
7	Outgoing	999-99-0160	999900160	2s	2023-11-20 16:25:53
8	Outgoing	999-99-0160	999900160	2s	2023-11-20 16:25:53
9	Outgoing	999-99-0160	999900160	5s	2023-11-20 16:25:41
10	Outgoing	999-99-0160	999900160	5s	2023-11-20 16:25:41

1

2

3

4

5

...

30

>

10 / page

Call Logs:	The Call Logs can be enabled or disabled;
Type:	The type of Call Logs, including incoming and

3.3. Access > Unlock Logs

It can support 500 unlock logs at most. If the logs are more than 500, the previous logs will be covered;

No.	Group	Name	Person Type	Unlock Type	Number	Status	Relay	Unlock Time
1	Ungroup	None	None	Password	1234	Failed	1	2023-11-27 18:18:19
2	Ungroup	None	None	Password	1	Failed	1	2023-11-27 18:18:29
3	Ungroup	None	None	Password	0000	Success	1	2023-11-27 18:17:40
4	Ungroup	None	None	Password	0000	Success	1	2023-11-27 18:17:23
5	Ungroup	None	None	Password	1234	Failed	1	2023-11-27 18:16:26
6	Ungroup	None	None	Password	0	Failed	1	2023-11-27 18:15:39
7	Ungroup	None	None	Password	1	Failed	1	2023-11-27 18:15:08
8	Ungroup	None	None	Password	1	Failed	1	2023-11-21 19:01:09
9	Ungroup	98980180	None	Intercom	sig192.168.35.126	Success	2	2023-11-17 13:36:37

Group:	The Group name you set on person column;
Name:	The name of the person you add;
Person Type:	The Person Type you set on person column. Including None, Household and Visitors;
Unlock Type:	The type of Unlock Logs, including Card, Password, Intercom, Exit button, Face, APP and HTTP;
Date&Time:	The Unlock Logs will be filtered by the Date&Time you set;
Search:	Fill in text inputs to search;
Reset:	Click reset to clear words in text inputs;
Delete All:	Delete all data on the chart;
Export:	Export all data on the chart;

4. Advanced

4.1. Advanced > Video

Real-time video from IP cameras can be obtained by filling in its URL (RTSP). On the talking interface of Indoor Monitor, you can click the little keyboard icon to

switch to IP cameras' video. (No.1 on the keyboard stands for Door Station while No.2 to No.5 stands for IP camera)

DNAKE

English · Hello, admin

General

Information

Basic

Time

Password

System

Intercom

Device

Network

SP

Ring Group

Phonebook

Call Logs

Access

Access Control

Person

Unlock Logs

Advanced

Video

More

Video

RTSP Feed

4

* URL

rtsp://admin:dnake123@192.168.56.179:554/iamc/monitor/channel1/1baudrtsp-0

* URL

rtsp://admin:123qweASD@192.168.51.196:554/1/1

* URL

rtsp://admin:cnHJARG@192.168.51.167:554/h264/ch1/main/av_stream

* URL

rtsp://admin:dnake123@192.168.51.175:554/h264/ch1/main/av_stream

Save

RTSP Feed:	4 IP cameras supported to switch while talking on Indoor Monitor;
URL:	IP camera's URL;

4.2. Advanced > More

More column is for Advertise, Tamper Alarm, Wallpaper, Periodic Sleep and ONU Penetration.

DNAKE

English · Hello, admin

General

Information

Basic

Time

Password

System

Intercom

Device

Network

SP

Ring Group

Phonebook

Call Logs

Access

Access Control

Person

Unlock Logs

Advanced

Video

More

Advertise

☒

URL

Time (minutes)

10

Save

Tamper

Tamper Alarm

☒

Save

Wallpaper

Upload

Image resolution: 800*1280

Image format: JPG, PNG

Interface Color: #0000

Periodic Sleep



0450

 [@Moo](#)

Tue

Word

Sum

Save

Other

OBUI Registration



Call Mode

RoomNo. Call


Address

Xiamen City, Fujian Province, China


Save

Advertise:	Enable to advertise on the screen saver of the device;
URL:	Advertise URL;
Time (minutes):	The time length of advertise display (10mins, 20mins, 30mins);
Tamper Alarm:	Enable to use Tamper alarm;
Wallpaper:	Upload a picture to apply it to the device UI. Please make sure the picture's resolution is the same as the device's and the size of the picture should be lower than 512KB. The format of Picture should be JPG or PNG;
Periodic Sleep:	User can set the schedule to make the device screen keep off;
ONU Penetration:	Enable to prevent ONU from banning multicast;
Call mode:	Switch to RoomNo. calls or SIP calls;
Address:	Filling in your location on the homepage.

SYSTEM DIAGRAM

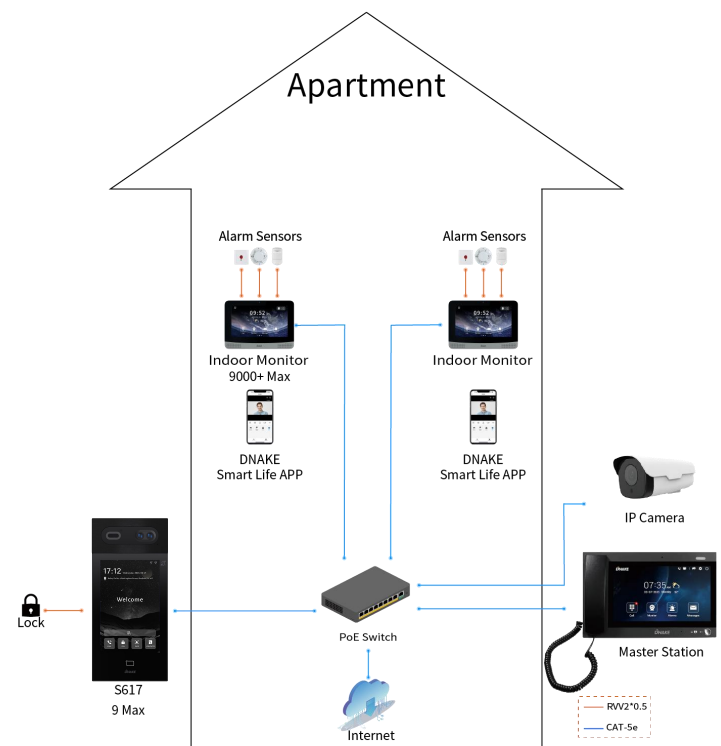


DEVICE WIRING

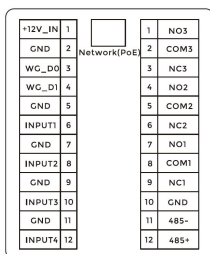

1. Network (PoE+)


Standard RJ45 interface is for the connection with PoE+ switch or other network switch.

PSE of power supply equipment shall comply with IEEE 802.3at (PoE+), with output power not less than 30W and output voltage not less than SOV.



2. Power

The power interface of Door Station connects to 12V DC power.

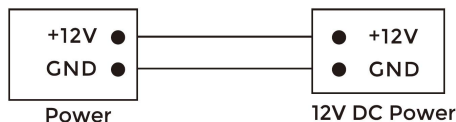

3. Switching Value Output


Connect to the lock module (an independent power supply is necessary for the lock).

NO3 ●	Normally open port of relay
COM3 ●	Common port of relay
NC3 ●	Normally closed port of relay
NO2 ●	Normally open port of relay
COM2 ●	Common port of relay
NC2 ●	Normally closed port of relay
NO1 ●	Normally open port of relay
COM1 ●	Common port of relay
NC1 ●	Normally closed port of relay

Switching Value Output

⚠ Warning!

1. When connecting to an inductive load device such as a relay or electromagnetic lock, you are recommended to use a diode 1A/400V (included in the accessories) in anti-parallel with the load device to absorb inductive load voltage peaks. The intercom will be better protected in this way.
2. The load current of the relay cannot be greater than 2A. See attached picture for more details.

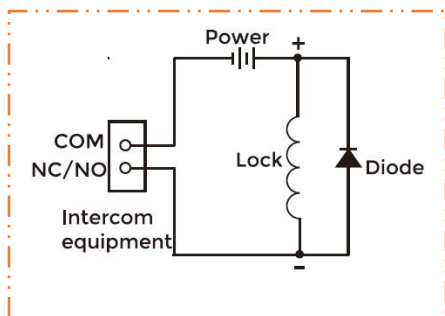


4.RS485

Enable to connect equipment with RS485 interface.




5. Exit / Door-detector / Fire Fighting Linkage



6. Card Reader Interface

The interface can be connected to one IC/ID card reader or be used for reading the information of built-in card reader.



Card Reader Interface


IC/ID Card Reader or Management Device

Note: Door station can only be connected to one card reader or management device at a time.

INSTALLATION

Surface Mounting-86 Mounting Box


Surface Mounting Box

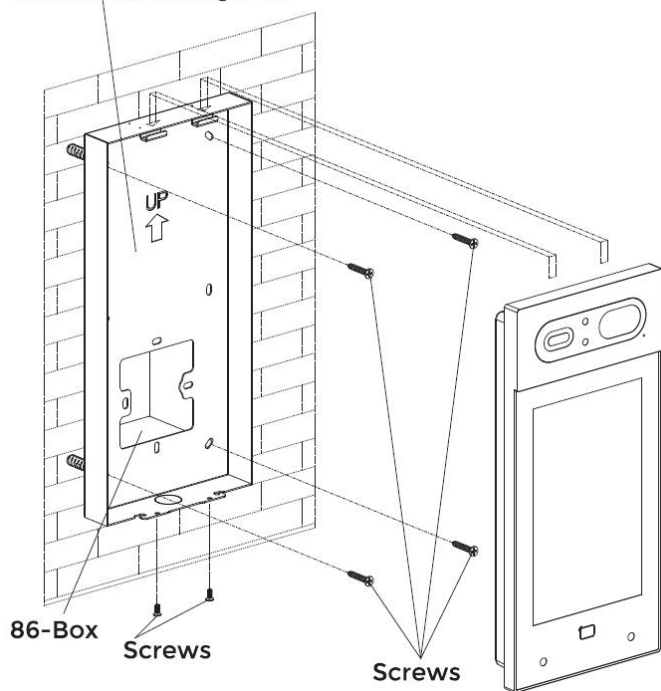

Product size: 140 × 300 × 37.8 mm
Surface Mounting size: 140 × 300 × 41.8 mm


Flush Mounting

Flush Mounting Box

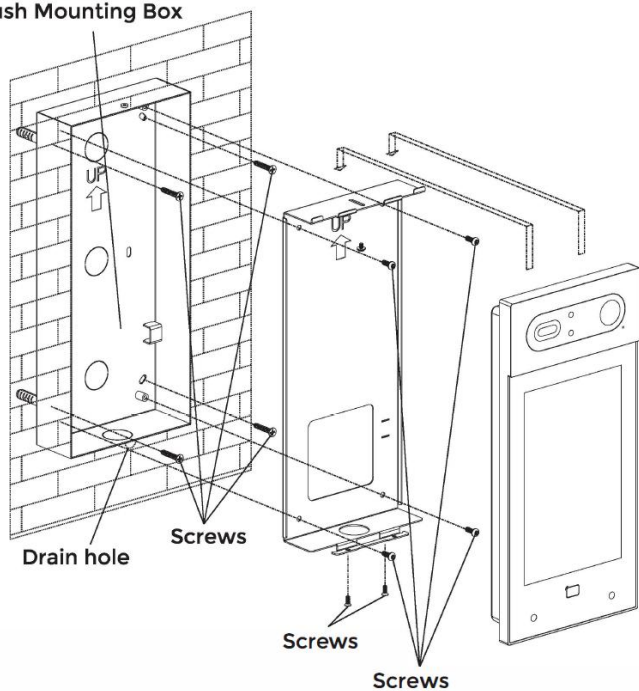


Product size: 140 × 300 × 37.8 mm
Flush Mounting size: 140 × 300 × 60.3 mm
Mounting hole size: 134 × 296 × 46 mm

Surface Mounting & Rain Hood (Optional)

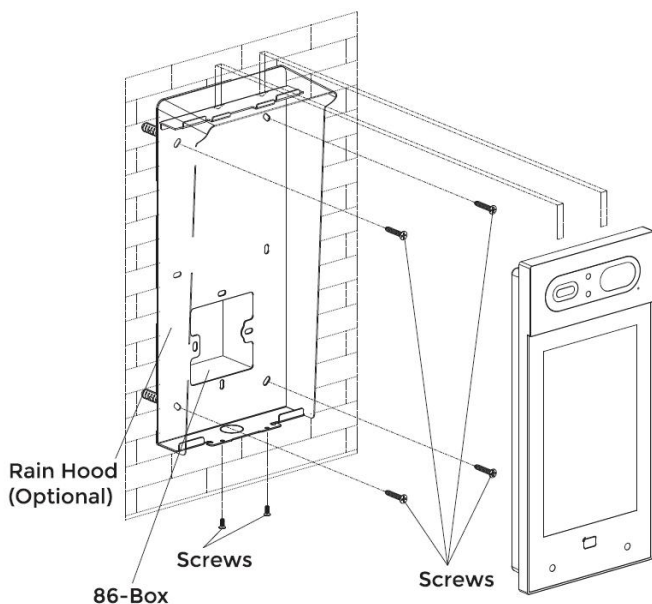


Product size:	140 × 300 × 39.8 mm
Surface Mounting Product size:	145 × 311 × 88 mm
Hole-cutting size:	134 × 296 × 46 mm

Flush Mounting & Rain Hood (Optional)

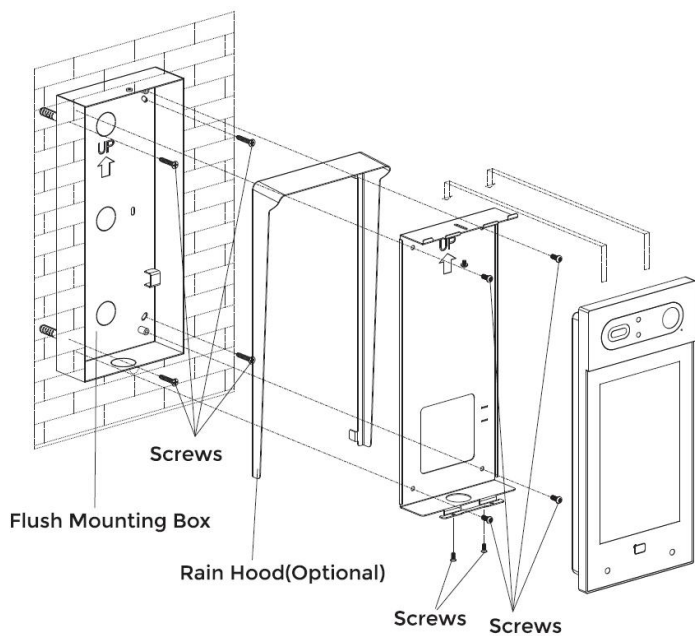

Product size: 140 × 300 × 39.8 mm
Flush Mounting product size: 145 × 311.5 × 88 mm
Hole-cutting size: 134 × 296 × 46 mm

Tips:

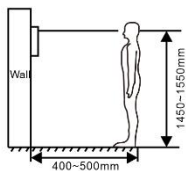

The camera should be 1450~1550mm above the ground.

The camera at this height can capture human face perfectly.

TROUBLESHOOTING

The Indoor Monitor cannot start up or power off automatically.

- Check whether it has power-failure, and power it on again

The Indoor Monitor display screen is too dim.

- Check whether the brightness and contrast settings of screen are correct.

No sound during the communication.

- Check whether the Indoor Monitor is set as mute mode, or the volume is set to the lowest.

The Indoor Monitor cannot monitor the Door Station.

- Other user is using the system, so you can use it once he/she finished the operation.

Multimedia files cannot be played normally.

- Check whether the system supports the file format. Please refer to the multimedia setting for details.

No response when clicking Indoor Monitor display screen.

- Press "Unlock" button for 5s, or slowly slide horizontally or vertically on the LCD to make touchscreen calibration. It needs to be calibrated.

Touchscreen responses slowly or cannot make calibration.

- Take down any protective paster, since it may affect identification
- and input for device;
- Ensure the finger is dry and clean when clicking touchscreen;
- Restart the device to clear any temporary software error.

The temperature of device is too high.

- Long-term use leads to high temperature. It's normal and will not affect the device's use life and performance.
-

SAFETY INSTRUCTION

In order to protect you and others from harm or your device from damage, please read the following information before using the device.

- Do not install the device in the following places:
- Do not install the device in high-temperature and moist environment or the area close to magnetic field, such as the electric generator, transformer or magnet.
- Do not place the device near the heating products such as electric heater or the fluid container.
- Do not place the device in the sun or near the heat source, which might cause discoloration or deformation of the device.
- Do not install the device in an unstable position to avoid the property losses or personal injury caused by the falling of device.

Guard against electric shock, fire and explosion:

- Do not use damaged power cord, plug or loose outlet.
- Do not touch the power cord with wet hand or unplug the power cord by pulling.
- Do not bend or damage the power cord.
- Do not touch the device with wet hand.
- Do not make the power supply slip or cause the impact.
- Do not use the power supply without the manufacturer's approval.
- Do not have the liquids such as water go into the device.

Clean Device Surface

- Clean the device surfaces with soft cloth dipped in some water, and then rub the surface with dry cloth.

Other Tips

- In order to prevent damage to the paint layer or the case, please do not expose the device to chemical products, such as the diluent, gasoline, alcohol, insect-resist agents, opacifying agent and insecticide.
- Do not knock on the device with hard objects.
- Do not press the screen surface. Overexertion might cause floppover or damage to the device.
- Please be careful when standing up from the area under the device.
- Do not disassemble, repair or modify the device at your own discretion.
- The arbitrary modification is not covered under warranty. When any repair required, please contact the customer service center.
- If there is abnormal sound, smell or fume in the device, please unplug the power cord immediately and contact the customer service center.
- When the device isn't used for a long time, the adaptor and memory card can be removed and placed in dry environment.
- When moving, please hand over the manual to new tenant for proper usage of the device.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF exposure statement

This equipment complies with the FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

**EASY & SMART
INTERCOM SOLUTIONS**